



V6812-T00 Series

HD 1MP IP Minidome Camera

User Manual

Notice

Copyright Statement

This manual may not be reproduced in any form or by any means to create any derivative such as translation, transformation, or adaptation without the prior written permission of Infinova.

Infinova reserves the right to change this manual and the specifications without prior notice. The most recent product specifications and user documentation for all Infinova products are available on our web site www.infinova.com.

Trademarks

Infinova® is a trademark of Infinova.

All other trademarks that may appear belong to their respective proprietors.

FCC Warning

The V6812-T00 Series HD 1MP IP minidome cameras comply with the FCC rules.

Operation is subject to the following two conditions:

- This device will not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

The V6812-T00 Series HD 1MP IP minidome cameras have been tested and found to comply with the limits for a Class A digital device, pursuant to the FCC rules. With these rules and regulations being obeyed to maintain the good working condition of device, the operation is not supposed to be affected by the external interruptions under certain circumstances. This device is electromagnetic, so all the installation and application processing along the device has to follow strictly to the manual or it may hamper the telecommunication around. Meanwhile, there is no guarantee that interference will not occur in a certain particular installation situation.

Read this manual carefully before installation. This manual should be saved for future use.

Important Safety Instructions and Warnings:

- Electronic devices must be kept away from water, fire or high magnetic radiation.
- Clean with a dry cloth.
- Provide adequate ventilation.
- Unplug the power supply when the device is not to be used for an extended period of time.
- Only use components and parts recommended by manufacturer.
- Position power source and related wires to assure to be kept away from ground and entrance.
- Refer to qualified personnel for all service matters.
- Save product packaging to ensure availability of proper shipping containers for future transportation.



Indicate that the un-insulated components within the product may carry a voltage harmful to humans.



Indicate operations that should be conducted in strict compliance with instructions and guidelines contained in this manual.

Warning: To avoid risk of fire and electric shock, keep the product away from rain and moisture!

CONTENTS

Chapter I System Introduction	1
1.1 Product Description.....	1
1.2 Product Features	1
1.3 System Requirement	2
1.4 Product Model.....	2
1.5 Specifications	3
1.6 Precautions	5
Chapter II Installation Instruction.....	6
Chapter III IE Browser Settings.....	15
3.1 Equipment Connection.....	15
3.2 Software Installation	15
Chapter IV Basic Function Operation	18
4.1 Browsing Videos	18
4.2 System	21
4.3 Network Settings.....	27
4.4 Camera Settings.....	36
4.5 Audio & Video Settings.....	41
4.6 Alarm Settings	51
4.7 Record Management	52
4.8 Account Settings.....	56
4.9 System Log.....	58
Appendix I Magnetic Ring Filter Instruction.....	60
Appendix II Questions & Solutions.....	61
Appendix III Cable Diameter Calculation and Lightning & Surge Protection.....	62

CHAPTER I SYSTEM INTRODUCTION

1.1 Product Description

V6812-T00 series IP minidome camera features 1/3" progressive scan CMOS sensor and built-in megapixel HD lens with the focal length of 2.8~12mm. With H.264 High profile/ M-JPEG compression format utilized, this camera can output HD full-frame videos with the resolution up to 720P.

V6812-T00 series IP minidome camera provides motion detection and privacy mask function which can protect certain private areas from being seen by operators. In addition, Power over Ethernet (PoE) greatly simplifies transmission cable.

Compact structure makes it easy to install. Also, this camera provides 3-axis adjustment, easy to adjust the monitoring angle.

V6812-T00 series IP minidome camera is suitable for financial institutions, telecommunications, governments, schools, airports, factories, hotels, museums, city streets and other high-resolution surveillance applications.

1.2 Product Features

Infinova's V6812-T00 series camera has the following features and functions:

- 1/3" progressive scan CMOS sensor
- IR-Cut Removable (ICR) Filter for Day/Night switching
- Onvif Profile S
- H.264 High profile/M-JPEG encoding
- Full-frame HD video output, with the resolution up to 1280×720@30fps
- High encoding efficiency, low data rate and high image quality
- Smooth videos and clear images of moving objects, free from ghost and smear

- Provide WDR function
- Supports storage with TF card
- Supports active video tampering
- Motion detection and privacy mask
- Bi-directional audio, G.711
- Supports alarm input and output
- PoE power supply
- Surface, Bracket or Recessed Mount
- 3-axis adjustment

1.3 System Requirement

Minimum PC Requirements:

CPU: Intel Pentium 4, 2.4 GHz or above

RAM: 512 MB or above

Network Port: 100M Ethernet port

Operating System: Microsoft Windows 7, Microsoft Windows XP

IE browser version: Microsoft Internet Explorer 6.0 or above

1.4 Product Model

This manual is for the following models:

V6812-T0020SP	Megapixel IP minidome camera, 3-axis, Day/night, 1/3 inch CMOS sensor, H.264/M-JPEG, 1.0Mpx, PoE, Surface mount, 2.8-12mm vari-focal lens
V6812-T0020PP	Megapixel IP minidome camera, 3-axis, Day/night, 1/3 inch CMOS sensor, H.264/M-JPEG, 1.0Mpx, PoE, Bracket mount, 2.8-12mm vari-focal lens
V6812-T0020RP	Megapixel IP minidome camera, 3-axis, Day/night, 1/3 inch CMOS sensor, H.264/M-JPEG, 1.0Mpx, PoE, Recessed ceiling mount, 2.8-12mm vari-focal lens

1.5 Specifications

Model	V6812-T00
Image Sensor	1/3" progressive scan CMOS
Dynamic Range	83.5dB
S/N Ratio	50dB
Lens	F1.4, f=2.8-12mm
Angle of View (Horizontal)	92°~27.2°
Camera Angle Adjustment	X (Panning): 0°~360°; Y (Tilting): -75°~75°; Z (Rotating): 0°~360°
Day/Night Functionality	ICR
Sensitivity	Color mode: 0.5 lux @ F1.4 (30IRE, AGC ON); B/W mode: 0.1 lux @ F1.4 (30IRE, AGC ON)
Exposure	Scene Mode, Manual mode, Shutter priority mode
Shutter	Auto/Manual (1/25s~1/8000s)
White Balance	Auto/Manual/Incandescent light/ Cool white fluorescent light/Sun light/Cloudy/Natrium light
Gain Control	Auto/Manual
Noise Reduction	3D
Video Compression	H.264 High profile/M-JPEG
Maximum Resolution	1280×720@H.264/M-JPEG
Optional Resolution	Major stream: 1280×720, 1024×768, 800×600; Minor stream: 720×576, 720×480, 640×480, 352×288, 352×240
Maximum Frame Rate	30fps @1280×720
Data Rate	Variable bit rate; Constant bit rate: 256Kbps~10000Kbps

Audio	Audio Compression: G.711-u; 1 input (Linear level, Resistance: 1000 Ohm), 1 output (Linear level, Resistance: 600 Ohm)
Motion Detection	Up to 4 areas
Privacy Mask	Up to 4 masks
Local Recording	Available
TF Card Storage	Available, up to 32G
Upgrade Online	Available
Password Protection	Available
Network Port	1 RJ45 10/100M self-adaptive Ethernet port
Applicable Protocols	IPv4, IPv6, TCP, UDP, IGMP, DHCP, FTP, SNMP (V3), SMTP, NTP, RTP, RTSP, RTCP, HTTP, HTTPS, TSL, SSL, 802.1X, QoS, PPPoE, DNS, ARP, ICMP, UPNP, DDNS, Profile S
Alarm	1 alarm input, 1 relay output
Power Supply	PoE IEEE 802.3af Class 2
Power Consumption	<3W
Operating Temperature	14° F ~ 122° F (-10° C ~ 50° C)
Storage Temperature	-4° F ~ 140° F (-20° C ~ 60° C)
Operating Humidity	0~90% RH (non-condensing)
Unit Dimensions (H×Ø)	3.88"×5.31" (98.5mm ×135mm)
Box Dimensions (L×W×H)	8.03"×7.48"×7.13" (204 mm×190 mm×181mm)
Unit Weight	1.06lbs. (0.48kg)
Shipping Weight	2.01lbs. (0.91kg)

1.6 Precautions

1. Do not drop the camera or subject it to strong knock.
2. Do not point the camera lens toward the sun or other strong light.
3. Do not install the camera in environment with temperature beyond the acceptable range (from -10°C to 50°C).
4. Never let liquid of any kind flow into this unit.
5. Do not directly touch the CMOS element. If it is necessary to clean the element, use a soft cloth moistened with alcohol to wipe off the dust.
6. If any abnormality occurs, make sure to unplug the unit and contact your local dealer.
7. This camera features AGC circuit, so when the camera is applied under low illumination, sensitivity will enhance automatically, making images look rough, which is normal.
8. Under the default setting, the lens has been adjusted till the object in a 1.5m-distance becomes clear. The lens can be readjusted as per the actual surveillance scenes.
9. The camera power supply can be PoE.
10. Firstly perform network settings after login. Gateway IP address should be set to the IP address of the gateway that the device connects to.
11. The IP address of the device should not conflict with other IP address; or else no video will be available.

CHAPTER II INSTALLATION INSTRUCTION

2.1 Surface Mounting


Step 1: Take off the bubble

Loosen the 3 Torx T20 screws with an L-Shaped Torx wrench (T20) and take off the bubble.

Step 2: Install camera module

Install the camera module to the ceiling with 3 tapping screws.

Drill screw holes and cable hole at the desired position as per Figure 2-1.

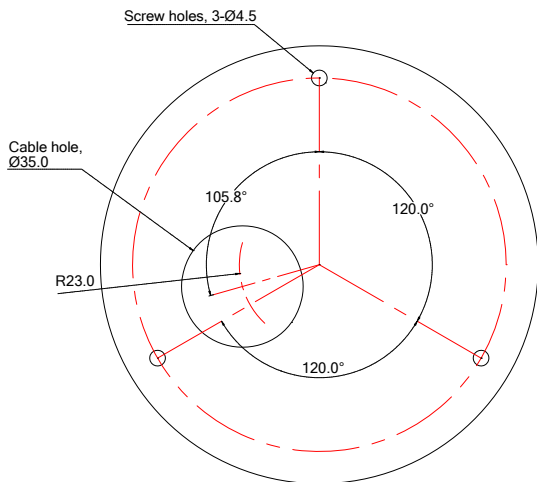

(Unit: mm)

Figure 2-1

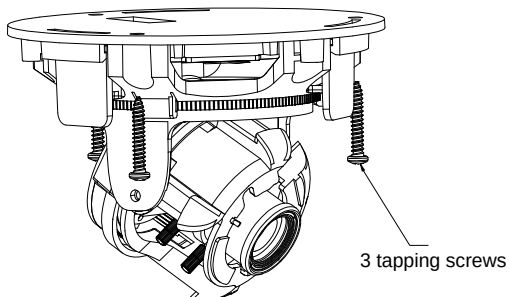


Figure 2-2

Note: The camera supports storage with TF card. See the figure below for TF card slot:

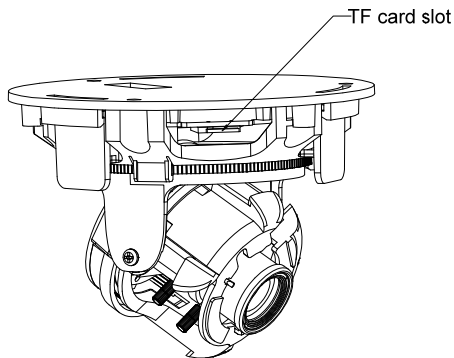


Figure 2-3

The size of TF card is up to 32GB.

Step 3: Adjust camera angle

Adjust the panning angle according to your surveillance direction.

Loosen Screw A to adjust tilting angle, then fasten the screw.
Adjust the rotating angle to ensure upright video.
Adjust the rods in the lens to focus clear.

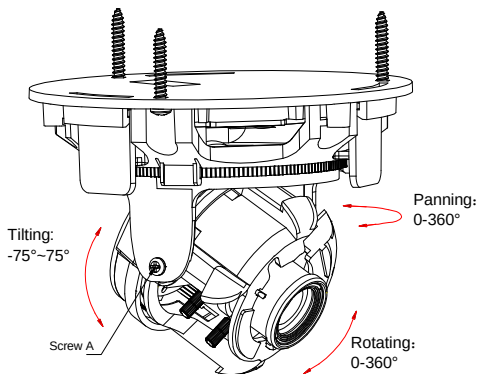


Figure 2-4

Step 4: Install dome bubble

Install the bubble flange to camera module. Align the screw holes of the two parts, and fasten the 3 Torx T20 screws with the L-Shaped Torx wrench (T20).

With all the procedures finished, user should further confirm whether each part of the device is properly and firmly connected.

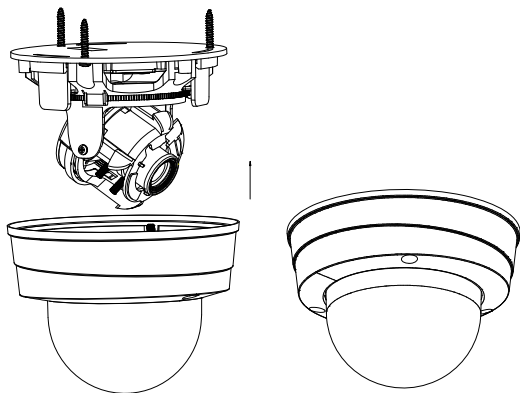


Figure 2-5

Dimensions (Unit: inch, in the parentheses is mm)

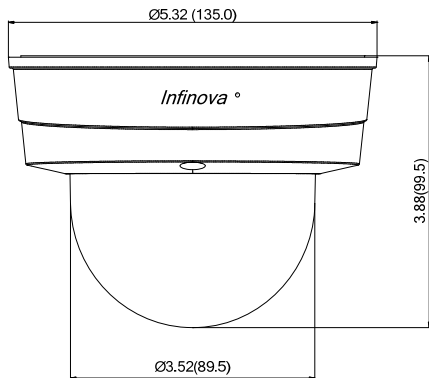


Figure 2-6

2.2 Recessed Mounting

Step 1: Drill mounting hole

Stick the schematic label on the ceiling, and drill a hole with 180mm in diameter as per the label.



Figure 2-7

Step 2: Install adapter

Pre-loosen M4 screws to make the blocks away from snap joints; place the adapter through the hole; screw the M4 screws to let the blocks to fasten the ceiling.

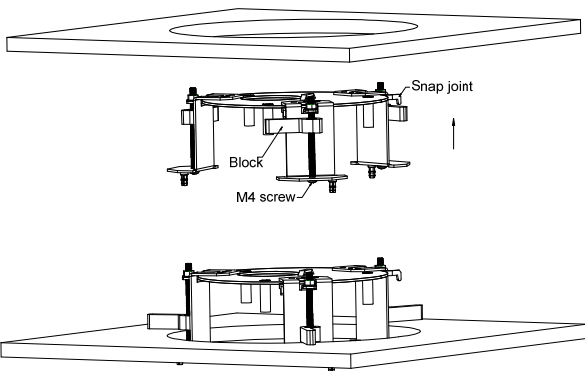


Figure 2-8

Step 3: Install camera module

Loosen the 3 Torx T20 screws with an L-Shaped Torx wrench (T20) and take off the bubble.

Install the camera module to the adapter with 3 M4X6 pan head screws.

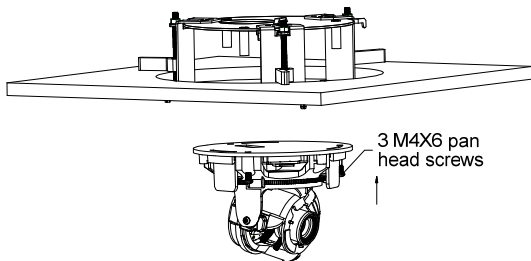


Figure 2-9

Step 4: Adjust camera angle

Adjust the panning angle according to your surveillance direction.

Loosen Screw A to adjust tilting angle, then fasten the screw.

Adjust the rotating angle to ensure upright video.

Adjust the rods in the lens to focus clear.

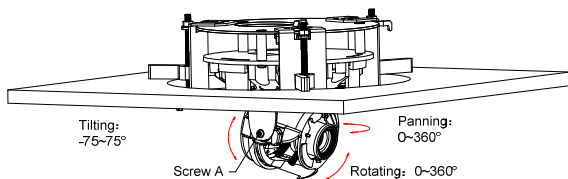


Figure 2-10

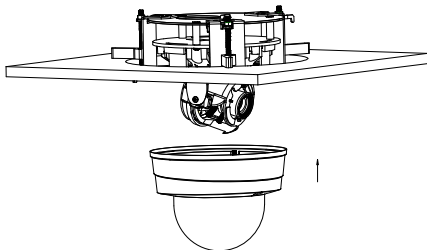


Figure 2-11

Step 5: Install dome bubble

Install the bubble flange to camera module. Align the screw holes of the two parts, and fasten the 3 Torx T20 screws with the L-Shaped Torx wrench (T20).

Step 6: Install recessed mounting housing

Align the 3 grooves of the housing with the 3 bolts in the adapter, and lock them together.

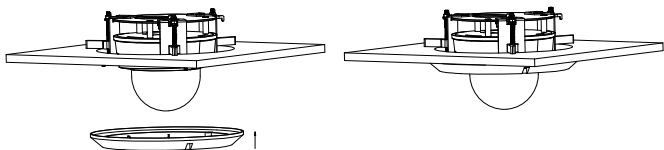


Figure 2-12

With all the procedures finished, user should further confirm whether each part of the device is properly and firmly connected.

2.3 Bracket Mounting

Note: V6812-T0020PP minidome camera supports bracket mount. V1760 series screw thread bracket is recommended.

Step 1: Install adapter to bracket

Screw the adapter to the bracket.



Figure 2-13

Step 2: Install camera module

Loosen the 3 Torx T20 screws with an L-Shaped Torx wrench (T20) and take off the bubble.

Install the camera module to the adapter with 3 M4X6 pan head screws.

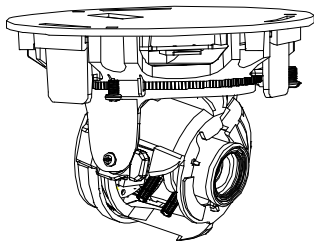


Figure 2-14

Step 3: Adjust camera angle

Adjust the panning angle according to your surveillance direction.

Loosen Screw A to adjust tilting angle, then fasten the screw.

Adjust the rotating angle to ensure upright video.

Adjust the rods in the lens to focus clear.

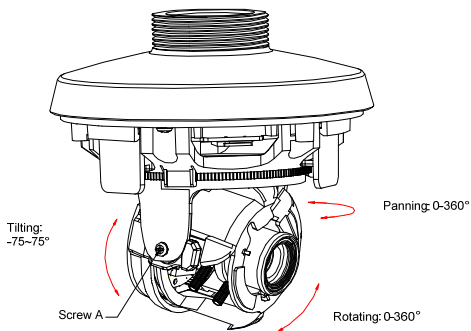


Figure 2-15

Step 4: Install dome bubble

Install the bubble flange to camera module. Align the screw holes of the two parts, and fasten the 3 Torx T20 screws with the L-Shaped Torx wrench (T20).

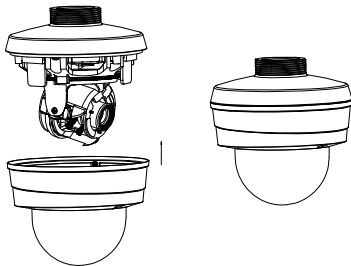


Figure 2-16

With all the procedures finished, user should further confirm whether each part of the device is properly and firmly connected.

CHAPTER III IE BROWSER SETTINGS

When view the video, the user need to adjust the IE browser of the monitor or other video devices, and set proper system function based on the following instructions:

- Support IE browser version: Internet Explorer 6.0 or above;
- Must install InfiPlayerAX control and equip with Directx 9.0c.

3.1 Equipment Connection

V6812-T00 series IP minidome camera can be directly connected to a computer, or connected to a network.

Note: Check whether the connection is tight or not before power-on.

3.2 Software Installation

The installation procedures of V6812-T00 series camera image software are listed as follows:

(1) Login

First, start IE browser and enter IP address. Enter user name and password in the pop-up login interface.

The default IP address is <http://192.168.1.100>; the default subnet mask is 255.255.255.0 and the default gateway IP address is 192.168.1.254. For normal access, correctly set local IP parameters before system login.

Do log in the system with the default super user for the first time to run the software. The default Super User is admin (password: admin).

(2) Install and run Control

There are two ways to install control.

Method 1:

The prompt message as below will come out in live view window after a

successful login. Click the link to run, or store the exe file, then run it.

Attention: Please allow running INFINOVA add-ins. If it couldn't be done automatically, please [click here](#) to install manually, and refresh the page after that.

Figure 3-1

If the installation fails, check whether there is video viewed through other IE window or page. You should close the video or the IE window directly.

If it succeeds, click refresh, you can view the live video.

Method 2:

The prompt message as below will come out in the page after a successful login. Right click “Add-on Disabled” and select “Run Add-on”.




Figure 3-2

Then the prompt of security warning will pop up to remind the user to install InfiPlayerAX control. Click “Install”.

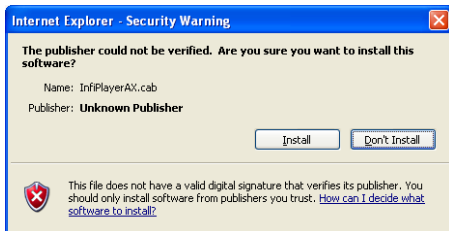


Figure 3-3

After InfiPlayerAX control is installed, you can view the live video. If it pops up reboot prompt, please cancel reboot. Then close all the IE window and install InfiPlayerAX control once again. The live video will display as below:

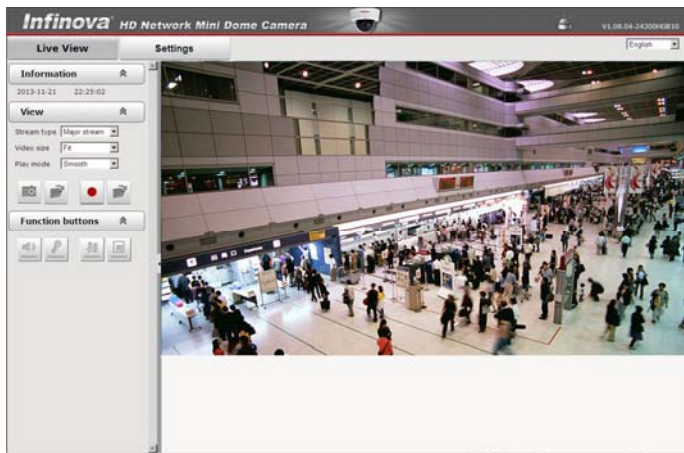


Figure 3-4

Note:

If InfiPlayerAX control installation falls, the live video won't display. Then, you should change the IE security level.

1. Click "Tool" in the menu bar, and then select "Internet Options" from the drop-down menu.
2. Select "Security" in the pop-up Internet options, as shown in the following figure:
3. Click "Internet" icon, then click "Custom Level" to pop up the following interface:
4. Select "Enable" or "Prompt" in the options of "Download unsigned ActiveX controls".
5. Select "Privacy" in the Internet options and uncheck the checkbox of "Block pop-ups". Refresh the webpage and set up the ActiveX control as per the prompts and then live view interface appears normally.

By now, the preparation for image viewing with IE browser comes to an end.

CHAPTER IV BASIC FUNCTION OPERATION

This chapter mainly introduces the settings and operation of V6812-T00 series.

4.1 Live View

Start IE browser after the server is powered on for about 75 seconds, and then enter IP address, such as <http://192.168.1.100> (default), in the address field.

Note: The default subnet mask is 255.255.255.0 and the default gateway IP address is 192.168.1.254. For normal access, please correctly set local IP parameters before system login.

The login interface is displayed as shown in figure below in English operating system.



Figure 4-1 User Login

Do login the system with the default super user for the first time to run the software. The system default Super User is admin (password: admin). Input the correct user ID and password and then press “OK” button to login the system.

After login is successful, the following interface will display:

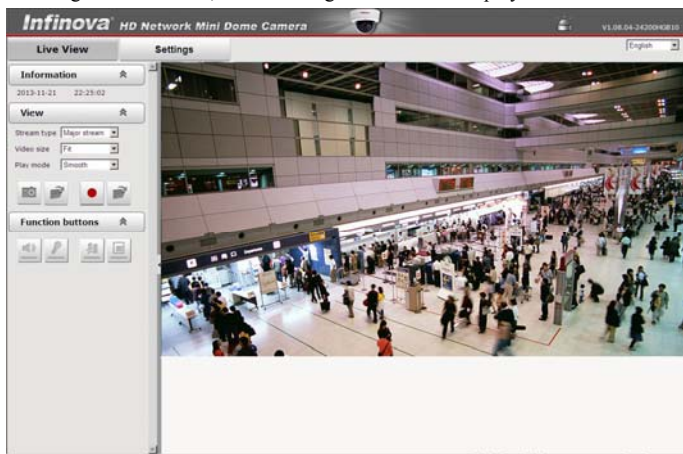


Figure 4-2 Live View

V6812-T00 series IP minidome camera supports H.264 and M-JPEG video compression formats. After successful login, it enters H.264 major stream live video interface. Users can also select H.264 minor stream or MJPEG from the dropdown list of stream type. In the H.264 major or minor stream type, users can do recording, snap shooting, and audio in/out settings. Over browsing videos, users can also select a proper video scale.

Click the button  to snapshot and  to enter the storage path. Default: C:\InfiPlayerAX\Picture.

V6812-T00 series supports local recording. Click the recording button  to start recording; when the button changes to , click it to stop recording. During local recording, “REC” appears on the video screen. Click the button  to enter the recording storage path. Default: C:\InfiPlayerAX\

Video.

Users can set the snap shooting and recording storage path in the audio and video settings interface.



Indicate audio input/output disabled. Click the buttons to enable audio input/output and then the buttons will be shown as .



Indicate that the motion detection and privacy mask functions are disabled. Click the buttons to enable them and then the buttons will be shown as .

Note: only when motion detection or privacy mask is enabled, you can set the corresponding function in Audio & Video Settings, refer to Section 4.5.3 or 4.5.4 for details.

Note: the login web page language should be set to the same as that of PC' s operating system.

Click the option tab “Settings” to enter the system setting interface.

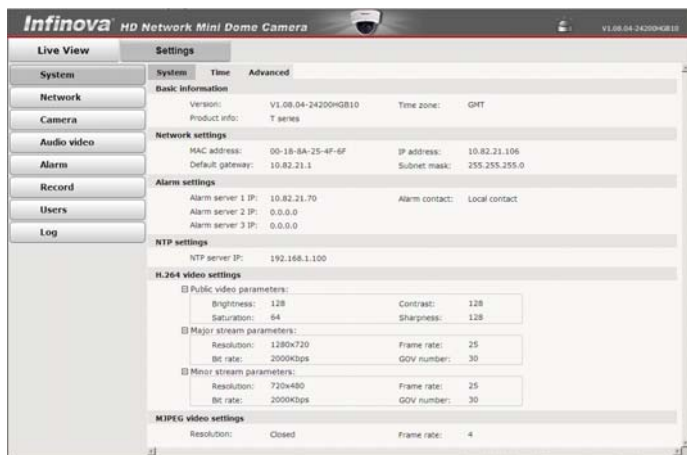


Figure 4-3 Settings Interface

With the help of navigation menu on the left, Super user can perform the following operations: Basic Information View, Time Settings and Advanced Settings, Network Settings, Camera Settings (including Basic Set, Effect Set, White Balance, Reset), Audio & Video Settings, Alarm Settings, Account Settings (Add/Delete User, Change Password), Log, etc.

Note: The following instructions are used for the super user.

4.2 System

Click the navigation bar [System] and it displays the following three option tabs: System, Time and Advanced, as shown in Figure 4-3.

4.2.1 System Information

The initial interface of System Settings displays related system information, such as basic system information, network settings, NTP settings, alarm settings, H.264/MJPEG video settings, etc.

4.2.2 Time Settings

The screenshot shows the 'Time' settings page. It includes sections for 'Time zone settings', 'NTP set', and 'Sync now'. The 'Time zone settings' section has a dropdown for time zones, radio buttons for daylight saving time, and save/cancel buttons. The 'NTP set' section has input fields for NTP server IP, sync time, and sync interval, along with save/cancel buttons. The 'Sync now' section displays the current device and local PC times and has buttons to sync with NTP or PC.

Figure 4-4 “Time” Settings

Time Zone Settings

Time Zone: Select the desired time zone in the scroll box, and then click “Save” to save it.

There are 33 time zones for your selection.

If Daylight Saving Time is applied in your region, please enable the daylight saving time.

After settings completed, please click the button “Save”.

NTP Settings

Set the NTP server’s IP address, synchronization interval, etc.

After completed, please click the button “Save”.

Sync now

There are two sync modes: local sync and NTP sync.

Local Sync means the system time is consistent with that of local PC. In the NTP Sync mode, the system will automatically adjust time to the same as that of NTP Server.

4.2.3 Advanced Settings

The screenshot shows the 'Advanced' settings page. At the top, there are three tabs: 'System', 'Time', and 'Advanced'. The 'Advanced' tab is active. Below the tabs, there are three main sections: 'File import', 'Factory settings', and 'Reboot'. The 'File import' section has a text input field, a 'Browse...' button, and a '(Select a local file)' label, with a 'Submit' button below. The 'Factory settings' section includes a description 'Press the button to reset all the parameters to the factory default settings.', a 'Maintain current IP:' checkbox which is checked, and a 'Reset' button. The 'Reboot' section includes a description 'Press the button to reboot the system, the window will reload after it.' and a 'Reboot' button.

Figure 4-5 “Advanced” Settings

Software Update

Free software update is provided for V6812-T00 series camera, and this update service can reduce system maintenance budget.

According to system update requirement submitted by user, we will send update letter for confirming the version of the product and provide the latest software for download, and help user to update the V6812-T00 series camera.

Follow the steps below to update software:

Click “Browse” button on the interface and the file selection dialog box will pop up.

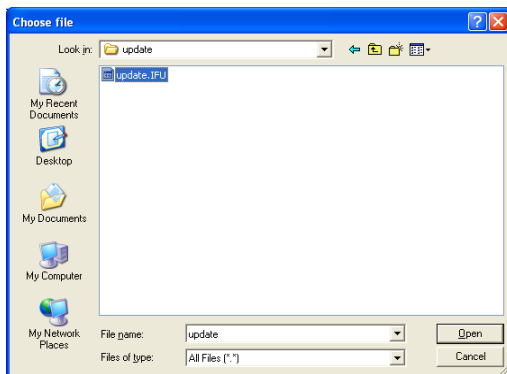


Figure 4-6

Select update file, and press “Open” button. The selected update file will be displayed in the Software Update box.

After that, click “Submit” button to update software, the following information will appear:

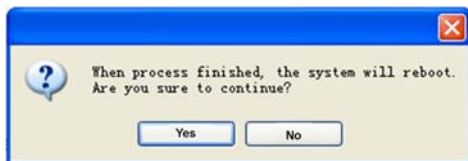


Figure 4-7

Click “Yes” button, run the program to finish the update.

The response time is due to the program type. You may wait a long time for some program. Do not power off during the update process. Power-off will make update fail, even damage the original program or unable to update again.

After update successfully, it needs to reboot the system. There is time prompt in the web page during reboot. After reboot, it will skip to new web page to run

new program.

Note: Available only for the super user.

Factory Settings

V6812-T00 series camera provides online reset function, which greatly facilitates reset adjustment.

Select “Keep current IP unchanged”, click “Reset” button and the system will pop up a message as below:

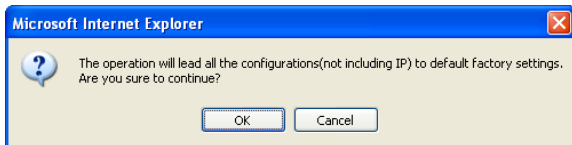


Figure 4-8

Click “OK”, all the parameters (excluding IP address) will be reset to the factory default settings.

If “Keep current IP unchanged” is unselected, the IP address will be reset to the factory default settings.

There is time prompt in the web page during reset. After reset, it will skip to new web page.

If current IP unchanged, you can access web page directly. If IP address resets to 192.168.1.100, you can't access web page. Then, you have to set PC's IP address to 192.168.1 section, such as 192.168.1.25. After that, access web page to change camera's IP address and save, PC's IP address will restore to the corresponding section.

Note:

1. To avoid error happens, the operation of online reset function should be performed under qualified personnel's guide.
2. Default IP address is 192.168.1.100, and default subnet mask is

255.255.255.0.

3. Do not power off during reset, or else the reset will fail.

Online Reboot

Click “Reboot” button, the dialog box “This operation will take 75 seconds, are you sure to continue?” pop up. Click “OK” and the system will restart.

There is time prompt in the web page during reboot. After reboot, it will skip to new web page.

Note: Available only for the super user.

4.3 Network Settings

Click “Network” in the navigation bar, and the following interface will display:

The screenshot shows a web-based configuration interface with a top navigation bar containing 11 tabs: Network, FTP, SMTP, HTTPS, 802.1X, QoS, IGMP, SIP, MDA, DDNS, and UPnP. The 'Network' tab is selected and highlighted. Below the tabs, the 'Network' section contains the following settings:

- IP mode: A dropdown menu set to 'IPv4'.
- DHCP: Radio buttons for 'On' and 'Off', with 'Off' selected.
- IP address: A text input field containing '10.82.21.83' and a 'Test' button to its right.
- Subnet mask: A text input field containing '255.255.255.0'.
- Default gateway: A text input field containing '10.82.21.1'.
- Primary DNS server: A text input field containing '192.168.1.3'.
- Secondary DNS server: A text input field containing '192.168.1.4'.

At the bottom of the Network section are 'Save' and 'Cancel' buttons. Below this is the 'PPPOE' section with the following settings:

- State: Radio buttons for 'On' and 'Off', with 'Off' selected.
- User name: An empty text input field.
- Password: An empty text input field.
- IP address: An empty text input field.

At the bottom of the PPPOE section are 'Save' and 'Cancel' buttons. Below this is the 'SNMP' section with the following settings:

- Heartbeat server IP: A text input field containing '0.0.0.0'.
- Heartbeat interval: A text input field containing '60' followed by the text 'sec.(1~300)'.

At the bottom of the SNMP section are 'Save' and 'Cancel' buttons.

Figure 4-9 Network Settings

11 options tabs are available: Network, FTP, SMTP, HTTPS, 802.1X, QoS, IGMP, SIP, MDA, DDNS and UPnP.

4.3.1 Network Settings

IP mode: support both IPv4 and IPv6 modes. Network parameters are slightly different under different IP modes.

The image shows two panels of network configuration settings. The top panel is for IPv4, and the bottom panel is for IPv6.

IPv4 Settings:

- IP mode: IPv4 (selected)
- DHCP: ☐ On ☒ Off
- IP address: 10.82.21.83
- Subnet mask: 255.255.255.0
- Default gateway: 10.82.21.1
- Primary DNS server: 192.168.1.3
- Secondary DNS server: 192.168.1.4
- Test button

Network Settings Panel:

Network

- IP mode: IPv6 (selected)
- DHCP: ☐ On ☐ Off
- Link address: fe80::74fc:b2ff:feda:91f4
- IP address: [] / 0
- Default gateway: []
- Save button
- Cancel button

Figure 4-10 Network Settings

Under IPv4 mode, users can enable or disable DHCP. When it is disabled, users can set Unit IP address, Subnet mask, Gateway and DNS server IP address manually.

Notes: The system indicator quickly flickers for 5s after the network settings completed.

Users can also enable/disable PPPoE in this interface. If enabled, users can set the user name and password.

V6812-T00 series camera supports heartbeat function. In SNMP settings, set and save the heartbeat sever IP address and Heartbeat interval, and then the heartbeat package will be sent to the server or client, which greatly facilitates the server or client to know about the camera's network status.

4.3.2 FTP Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
FTP						
Server IP:		0.0.0.0				
User name:						
Password:						
		Save Cancel				

Figure 4-11 FTP Settings

V6812-T00 series camera has the function of alarm associated with FTP upload (alarm triggered image snapshot). Configure server IP, user name and password in the FTP settings and activate FTP handling way in alarm settings, then alarm triggered images FTP upload can be achieved.

4.3.3 SMTP Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
SMTP						
Server IP:		0.0.0.0				
From:		IP@infinova.com				
To:		Mseriestest@infinova.cc				
CC:						
Authentication:		☐ On ☒ Off				
User name:						
Password:						
		Save Cancel				

Figure 4-12 SMTP Settings

User needs to set mail server, recipient, etc in SMTP settings interface.

- **Server IP:** Set mail server address.
- **From:** Set sender's mail address.
- **To:** Mail address of recipient.
- **CC:** Mail address of the person copy to.

- **Authentication:** Enable or disable authentication function. This function should be set according to authentication requirements of mail server.
- **User name:** Sender's name, it can be set according user's needs.
- **Password:** Set sender's password.

Note: there is no limit for Sender's name and password settings.

After setting, click “Set” Save to take effect.

If user selects “mail” in “Alarm Settings” interface, system will send mails according to SMTP settings.

4.3.4 HTTPS Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
CA certificate import						
CA certificate:					Browse...	Submit

Figure 4-13 HTTPS Settings

V6812-T00 series camera supports HTTPS protocol. You can import the CA certificate in the interface.

4.3.5 802.1X Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
802.1X						
Authentication:		☒ On ☐ Off				
EAP method:		MD5				
User name:						
Password:						
				Save Cancel		

Figure 4-14 802.1X Settings

V6812-T00 series camera supports 802.1X protocol. You have to enable 802.1X authentication when needed. Then, select an EAP method and enter the user name and password.

4.3.6 QOS Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
QOS						
QOS option:		Normal service Normal service Max reliability Max throughput Min delay		Cancel		

Figure 4-15 QOS Settings

There are 4 network Qos modes to be selected:

- (1) Normal Service
- (2) Max Reliability
- (3) Max Throughput
- (4) Min Delay

Recommend: Normal Service.

4.3.7 IGMP Settings

Network	FTP	SMTP	HTTPS	802.1X	QOS	IGMP
IGMP						
Stream type:		Major Stream				
State:		☒ On ☐ Off				
MultiCast IP address:		224.0.1.88				
RTP port:		8888				
			Save		Cancel	

Figure 4-16 IGMP Settings

V6812-T00 series camera supports multicast function. In the IGMP interface,

users can select the stream type and set the state, multicast IP address and RTP port.

4.3.8 SIP Settings

Network	FTP	SMTP	HTTPS	802.1X	QoS	IGMP	SIP
SIP server							
SIP server IP:							
Port:		0					
Server ID:							
Device ID:							
Alarm ID:							
Register Interval:		1900					
Heart beat Interval:		60					
Auth UserName:							
UserName:							
Password:							
		Save Cancel					
Position Information							
Position name:							
Longitude:		0.00					
Latitude:		0.00					
		Save Cancel					

Figure 4-17 SIP Settings

SIP Server: to configure SIP server for device;

SIP Server IP: the IP address of SIP server;

Port: the port number of SIP server;

Server ID: the ID of SIP server;

Device ID: the device ID used for registration with SIP server;

Alarm ID: the ID registered for device alarm;

Register Interval: the interval for re-registration of device in seconds;

Heart Beat Interval: the interval to send heartbeat information by the device in seconds;

After configuration completed, click Save and the device sends a registration request to the server.

Position Information: the mounting information or instruction for device.

Longitude: the longitude of mounting position, as precise to two places of decimal;

Latitude: the latitude of mounting position, as precise to two places of decimal.

4.3.9 MDA Settings

Network FTP SMTP HTTPS 802.1X QoS IGMP STP MDA

Motion detection alarm

State: ☒ On ☐ Off

Camera name:

User name:

Password:

Server IP:

Port No.:

Save Cancel

Figure 4-18 MDA Settings

In MDA settings interface, you can set the Sever which the motion detection alarm uploads to.

State: disable or enable motion detection alarm upload. When it's on, you can set camera name, user name, password, server IP and Port number. After setting completed, click "Save" button to take effect.

4.3.10 DDNS Settings

DDNS

Server enable: ☒

Server type: Oray DDNS

Address: www.oray.org

Domain:

User name:

Password:

Update time: 10 Minute(2~500)

Save Cancel

Figure 4-19 DDNS Settings

Dynamic Domain Name System (DDNS) synchronizes the host name and dynamic IP address continuously. Users don't have to memorize the dynamic IP address, but enter the dynamic domain name to connect the IP camera.

DDNS needs a PC with fixed IP address on the Internet to run the dynamic domain name server.

Operation: select DDNS type in Enable option, enter the IP address of the DDNS server into the address bar, configure domain name, user name, password and update time and then save the settings. Open the IE browser, and enter the domain name to go to the query page of the device.

4.3.11 UPnP Settings

Create mapping between private network and the Internet via UPNP protocol. Select UpnP option and enter the configuration page. The added mapping list appears on the page.

UPnP

Add 

Enable	Service	Protocol	Internal port	External port	Operate
☐	WebService	TCP	80	80	 
☐	PrivService	TCP	90	90	 
☐	RTSPService	TCP	554	554	 

Figure 4-20 UPnP Settings

In “Operation” column,  means to delete;  means to edit user information.

Click Add button to add the mapping.

Service name:

Protocol:

Internal port:

External port:

Figure 4-21

4.4 Camera Settings

Click “Camera” in the navigation bar to enter the interface shown as below:

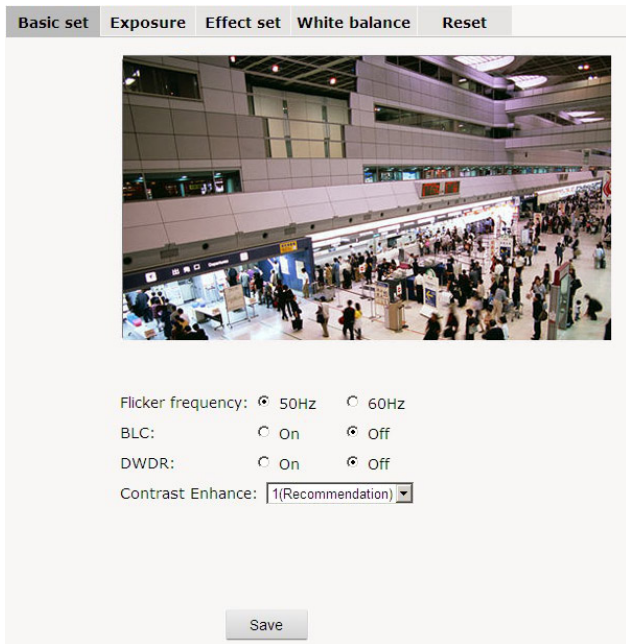


Figure 4-22 Basic Settings

4.4.1 Basic Settings

You can set the following parameters:

Flicker frequency: 50Hz or 60Hz.

Enable or disable backlight compensation or digital WDR.

Contrast Enhance: 1~6 levels match with 6 kinds of Gamma curve separately. If

it is set to Auto, the system will adjust automatically.

4.4.2 Exposure Settings

Basic set

Exposure

Effect set

White balance

Reset



Exposure set:

Scene

Auto aperture:

On

ICR control:

Auto mode

ICR switch time:

20s

Scene:

Outdoor

AGC:

30

Shutter speed:

1/150

Manual AGC:

32

AE target:

21

Save

Figure 4-23 Exposure Settings

Exposure set, auto aperture, ICR control, ICR switch time, scene, AGC, shutter speed and manual AGC can also be set in this interface.

Exposure Set: Manual, Scene and Shutter priority. In the Scene mode, indoor or outdoor can be selected and AGC can be set (maximum 64X); if set to manual mode, shutter speed can be set from 1/25s to 1/8000s and manual AGC can be

set to 1X to 64X, yet the scene and AGC are nonadjustable; if set to shutter priority mode, the shutter speed and AGC can be set.

Auto Aperture: to enable or disable auto iris.

ICR Control: Auto mode, Night, Day, and IO input 1. In Auto mode, the camera can automatically control the day/night switching; in Day mode, videos are in color mode; in Night mode, videos are in black/white mode; in IO input 1 mode, ICR is controlled by external signals.

AE target: set AE target level. It can adjust video brightness via AE target setup.

4.4.3 Effect Settings

In the Effect Settings interface, users can adjust the brightness, sharpness, hue, contrast, saturation and 3D denoise in two ways: General or Mode, as shown in the figure below:

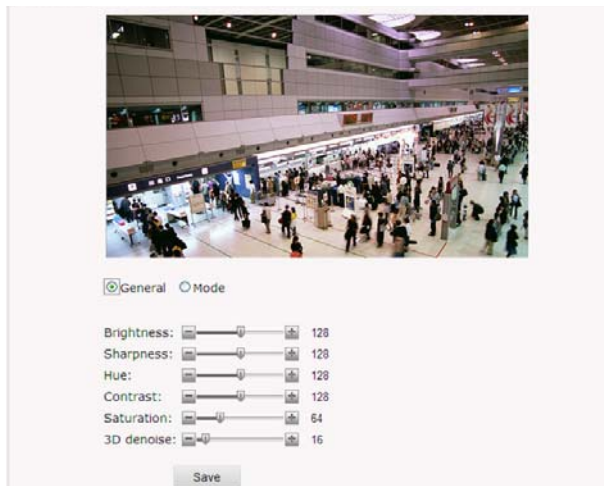


Figure 4-10 Effect Set - General

Drag the sliding block to adjust the brightness, sharpness, hue, contrast, saturation and 3D denoise.



☐ General ☒ Mode

Mode call

Start time	End time	Call	On
0 : 0	0 : 0	mode1	☐
0 : 0	0 : 0	mode1	☐
0 : 0	0 : 0	mode1	☐
0 : 0	0 : 0	mode1	☐
0 : 0	0 : 0	mode1	☐
0 : 0	0 : 0	mode1	☐

Save

Mode edit

Mode: mode1

Name: mode1

ICR control: Auto mode

Scene: Normal

Brightness: 128

Sharpness: 128

Hue: 128

Contrast: 128

Saturation: 64

3D denoise: 16

Factoryset

Save

Cancel

Figure 4-25 Effect Set - Mode

The camera supports 6 video effect modes. Users can set and save Name, ICR control mode and Scene parameters for each mode. Click “Factoryset” to restore it to default settings.

The camera provides 7 Scene modes: Normal, Anti Fog, Motion, Entrance, Natrium, Sharpen, USrMode. Each mode matches with a group of parameters, such as brightness, sharpness, hue, contrast, saturation and 3D denoise.

In the Mode call, users can set effect mode call status and call period.

4.4.4 White Balance Settings



Figure 4-26 White Balance Settings

The camera has rich white balance modes, including Auto, Manual, Incandescent light, Cool white fluorescent light, Sun light, Cloudy and Natrium light. If set to manual mode, you can set the red gain and blue gain.

4.4.5 Reset

In the interface, you can restore all the camera parameters to the factory default settings.

4.5 Audio & Video Settings

Click the button Audio & Video in the navigation bar to display the following interface.

Video	OSD	Privacy	Motion	Shelter	Link config	Path	Audio																																				
																																											
☒ Major stream ☐ Minor stream ☐ MJPEG <table><tr><td>Resolution:</td><td>1280x720</td><td>Resolution:</td><td>720x480</td><td>Resolution:</td><td>720x480</td></tr><tr><td>Frame rate:</td><td>25</td><td>Frame rate:</td><td>25</td><td>Frame rate:</td><td>4</td></tr><tr><td>GOV number:</td><td>20</td><td>GOV number:</td><td>30</td><td>Image quality:</td><td>Average</td></tr><tr><td>Bit rate:</td><td>CBR</td><td>Bit rate:</td><td>CBR</td><td></td><td></td></tr><tr><td>Bit rate:</td><td>10000 kbps (1000~10000)</td><td>Bit rate:</td><td>2000 kbps (256~2000)</td><td></td><td></td></tr><tr><td colspan="2"> Save </td><td colspan="2"> Save </td><td colspan="2"> Save </td></tr></table>								Resolution:	1280x720	Resolution:	720x480	Resolution:	720x480	Frame rate:	25	Frame rate:	25	Frame rate:	4	GOV number:	20	GOV number:	30	Image quality:	Average	Bit rate:	CBR	Bit rate:	CBR			Bit rate:	10000 kbps (1000~10000)	Bit rate:	2000 kbps (256~2000)			Save		Save		Save	
Resolution:	1280x720	Resolution:	720x480	Resolution:	720x480																																						
Frame rate:	25	Frame rate:	25	Frame rate:	4																																						
GOV number:	20	GOV number:	30	Image quality:	Average																																						
Bit rate:	CBR	Bit rate:	CBR																																								
Bit rate:	10000 kbps (1000~10000)	Bit rate:	2000 kbps (256~2000)																																								
Save		Save		Save																																							

Figure 4-27 Video Settings

Click the related option tab to enter the setting interface.

4.5.1 Video Settings

Users can set the video parameters in the format of H.264 major or minor stream and MJPEG stream, such as resolution, frame rate and IP rate.

Resolution:

For H.264 major stream, the resolution comes up to 1280×720, with 1024×768 and 800×600 optional.

For H.264 minor stream, the resolution comes to 720×576, 720×480, 640×480, 352×288, 352×240 and closed.

For MJPEG stream, the resolution comes to 1280×720, 720×480 and closed.

Frame Rate: the number of compressed frames produced by camera per second.

The bigger the frame is, the better the image continuity will be, but the CPU performance is lowered.

The smaller the frame is, the worse the image continuity will be, but the CPU could handle more events.

The maximum frame rate for H.264 is 30fps. The maximum frame rate for MJPEG is 10fps.

Note: the video settings of H.264 major/minor stream are linkage with that of MJPEG stream. If H.264 major stream is set to 720P/30fps, minor stream closed, MJPEG is only able to set to 720P/4fps. If H.264 major stream is set to 720P/25fps, minor stream closed, MJPEG frame is able to set to 10fps. Do operate according to the prompt on the page.

GOV number: GOV number means the ratio of I frame to P frame in compressed video images.

The bigger the value is, the less the data quantity is and the less network resource it occupies.

Max. GOV number can be set to 60.

Bit Rate: There are 2 modes of bit rate: variable rate (vbr) and constant rate (cbr).

The variable rate can adjust the bandwidth that it occupies automatically according to the complexity of image, because the complexity of real video sequence keeps changing, details, speed, etc, and the variable rate setting mode

can be used to choose how much bandwidth should be used. If the video gets more details and moving fast, then it takes up more bandwidth to transmit, and reversely it occupies less bandwidth. When the setting goes with constant bit rate, then the image is transmitted under a constant bandwidth.

Bit Rate Upper Limit: You have to set the upper limit of bit rate if “vbr” is selected; the stream size will be fixed if “cbr” is selected and the stream size is defined in the “Bit Rate Upper Limit”. For major stream, the bit rate upper limit can be 1000Kbps ~10000Kbps; for minor stream, the bit rate upper limit can be 256Kbps ~2000Kbps.

4.5.2 OSD

Video	OSD	Privacy	Motion	Shelter	Link config	Path	Audio
							
Row mode: ☒ Mode1 ☐ Mode2							
Text 1:		☒ On ☐ Off		X/Y(0-99): 0 0			
Context:		323232					
Text 2:		☒ On ☐ Off		X/Y(0-99): 0 0			
Context:		232323					
Date OSD:		☒ On ☐ Off		X/Y(0-99): 99 0			
Font size:		5					
Save							

Figure 4-28 OSD Mode 1

OSD settings include: Text OSD and Date OSD.

The camera supports two OSD modes: Mode 1, Mode 2. You can switch the mode only if Text 2 is on.

Only if Text 1, Text 2 and Date OSD are set to “On”, you can set the text content and the display position of text and date.

Context: Enter the text content in the box of Context, which allows up to 40 characters (lower/upper case letters and 0~9).

X-axis &Y-axis: The title axis location. Both X-axis and Y-axis can be any of whole numbers from 0 to 99.

Font Size: Set the font size to be displayed. The bigger the value is, the larger the font size is. Default as: 3.

After all settings finished, click “Save” button to display OSD on the video.

To cancel OSD, set it to “Off” and then click the button “Save”.

See the figure for OSD Mode 2:

Row mode: ☐ Mode1 ☒ Mode2

Text 1: ☒ On ☐ Off X/Y(0-99):

Context:

Text 2: ☒ On ☐ Off X/Y(0-99):

Row 1:

Row 2:

Row 3:

Row 4:

Row 5:

Date OSD: ☒ On ☐ Off X/Y(0-99):

Figure 4-29 OSD Mode 2

Only if Text 1, Text 2 and Date OSD are set to “On”, you can set the text content and the display position of text and date.

Context: Enter the text content in the box of Context. Text 2 supports five-row display and each row allows up to 40 characters (lower/upper case letters and 0~9).

X-axis &Y-axis: The title axis location. Both X-axis and Y-axis can be any of whole numbers from 0 to 99.

Font Size: Set the font size to be displayed. The bigger the value is, the larger the font size is. Default as: 3.

After all settings finished, click “Save” button to display OSD on the video. To cancel OSD, set it to “Off” and then click the button “Save”.

4.5.3 Privacy Mask

V6812-T00 series camera supports 4 privacy masks. If there is certain location within the surveillance area where operators are not allowed to see, and thus, Privacy Mask can be applied. System covers and shields the sensitive area via Privacy Mask setting, to avoid operators observing certain sensitive locations on monitor.

Note: do turn on privacy mask function in Live View interface before privacy mask setting (see Section 4.1).



Figure 4-30 Privacy Mask Settings

How to set the privacy masks:

Tick the box of motion detection area number. Click the button “Draw” with the mouse, press the left mouse button and drag on the video till a blue frame displays on the screen. Then, click the button “Save” with the left mouse button and the blue frame changes into black which indicates a successful setting.

To cancel a privacy mask, just cancel the box ticking.

4.5.4 Motion Detection

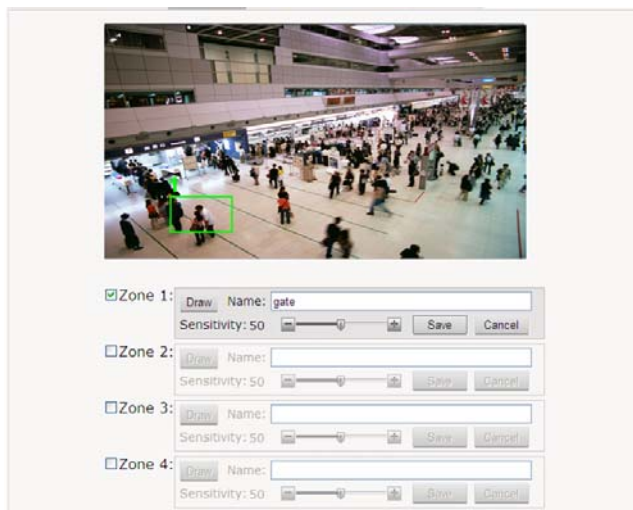


Figure 4-31 Motion Detection Settings

V6812-T00 series camera support motion detection. Users can easily set the motion detection areas (up to 4) with the mouse.

Note: do turn on motion detection function in Live View interface before motion detection setting (see Section 4.1).

Tick the box of Zone number to be set. If the motion detection area has been set, a blue frame will be displayed on the screen.

How to set the motion detection area:

How to set the motion detection area:

Tick the box of motion detection area number. Click the button “Draw” with the mouse, press the left mouse button and drag on the video till a blue frame

displays on the screen. Then, click the button “Save” with the left mouse button and the blue frame changes into green which indicates a successful setting.

Besides, you can set the area name and sensitivity.

To cancel a motion detection area, just cancel the box ticking.

4.5.5 Shelter Alarm



Figure 4-32

V6812-T00 series camera supports shelter alarm function. Users can easily set the shelter alarm areas with the mouse.

At first, enable shelter alarm. Click the button “Draw” with the mouse, press the left mouse button and drag on the video till a blue frame displays on the screen. Then, click the button “Save” with the left mouse button and the blue frame changes into green which indicates a successful setting.

Besides, you can set the area name and sensitivity.

It will trigger alarm when the video within the area is shielded. Refer to Section 4.6 for alarm contact details.

4.5.6 Link Configure




Figure 4-33

For each stream, the total of 90 port and RTSP port is 5. In this interface, you can set the video numbers of 90 port and RTSP port.

The default setting is visit 2-ch major stream, 2-ch minor stream and 2-ch MJPEG video via 90 port and visit 3-ch major stream, 3-ch minor stream and 3-ch MJPEG video via RTSP port.

4.5.7 Storage Path

You can set the photo saving path and recording saving path in the following interface.

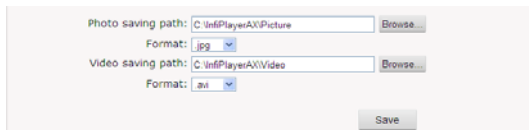


Figure 4-34 Storage Path

Default photo saving path: C:\InfiPlayerAX\Picture.

Default video saving path: C:\InfiPlayerAX\ Video.

Photo and video formats can also be set. The default photo format is .jpg and the default video format is .avi.

To change the saving path, click the button “Browse” and select the path from the popup dialog box.

4.5.8 Audio Settings



Sample rate: 8K
Format: G711-U

Figure 4-35 Audio Settings

Sample Rate: 8K.

Format: G.711-U.

4.6 Alarm Settings

Click “Alarm” in the navigation bar to display the following Alarm Settings interface:

Alarm configuration
I/O In 1:
I/O In 2:
Alarm out contact:
Alarm server 1 IP:
Alarm server 2 IP:
Alarm server 3 IP:

Alarm out contact
Note: Enable MJPEG before Mail or FTP is selected.

	I/O out 1	Mail	SD card	FTP	Audio	Select all
I/O In 1	☐	☐	☒	☐	☐	☐
I/O In 2	☐	☐	☒	☐	☐	☐
Motion area 1	☐	☐	☒	☐	☐	☐
Motion area 2	☐	☐	☒	☐	☐	☐
Motion area 3	☐	☐	☒	☐	☐	☐
Motion area 4	☐	☐	☒	☐	☐	☐
Shelter area	☒	☐	☒	☐	☐	☐
Network link down	☐	-	☒	-	☐	☐
IP address conflict	-	-	-	-	☐	☐

Alarm schedule

	Start time	End time
☐ Sun.	00 : 00	00 : 00
☐ Mon.	00 : 00	00 : 00
☐ Tue.	00 : 00	00 : 00
☐ Wed.	00 : 00	00 : 00
☐ Thu.	00 : 00	00 : 00
☐ Fri.	00 : 00	00 : 00
☐ Sat.	00 : 00	00 : 00
☒ Everyday	00 : 00	23 : 59

Figure 4-36 Alarm Settings

Alarm Configuration

I/O In 1, I/O In 2: Settable 2-channel alarm inputs.

Each alarm input has 2 modes: Grounded Circuit or Open Circuit.

Alarm out Contact: used to set sending way of alarm.

Local Contact: I/O out is triggered by I/O alarm in, motion detection alarm, shelter alarm, SD card out, network link down or IP address conflict. Default:

Local Contact.

Net Contact: I/O out is controlled by the surveillance management software.

Note: This function needs to be supported by digital video surveillance management software like V2216. If Net Contact is selected, users have to set Alarm Server IP the same as the IP address of V2216-CMS server. After related setting to V2216 finished, users can remotely control the relay via V2216 software. For detailed information, please refer to V2216 manual.

Alarm Server IP: used to set the IP address of alarm server. If alarm occurs, it will inform the alarm server.

Alarmout Contact

Users can set the relevant alarm response ways for I/O alarm in, motion detection alarm, shelter alarm, SD card out, network link down or IP address conflict, which can be Alarm out 1 (if Net Contact is selected, Alarm output 1 on the web page is unavailable), SD card, Mail, FTP or Audio. After setting completed, click “Set” button to take effect.

Alarm Schedule

V6812-T00 series camera can set the effective alarm schedule. Select the alarm period (if Sunday is selected, alarm will be enabled during the set period of each Sunday; if everyday is selected, alarm will be enabled during the set period of everyday), and then, set the time period. Enter the start time and end time in the 24-hour format. The end time must be larger than the start time.

4.7 Record Management

V6812-T00 series IP cameras support storage with SD card. In the Record Management interface, you can set the recording parameters, replay and download the recorded videos.

4.7.1 Record Settings

Settings

Replay

Recording control

Recording video type:

☒ Major stream

☐ Minor stream

SD card full:

☒ Overwrite

☐ Stop

Recording mode:

☒ Alarm triggered

☐ Always

☐ Close

Save

(Note: Alarm trigger still need to associate the SD Card in the alarm page.)

Peripheral equipment manage

SD card state:

State: Mounted

write-protect: Off

Used space: 5.78GB

Total space: 14.92GB

SD card operation:

Reject

Format

Figure 4-37 Record Settings

Recording video type: Select the type of videos to record, major stream or minor stream.

SD card when full: Overwrite or Stop. Overwrite means newly recorded videos automatically overwrite the previous videos when the SD card is full; Stop means recording stops when the SD card is full.

Recording mode: Event triggered, Always, Close. If Event Triggered is selected, the event triggered can be Network disconnection or alarm. If Network disconnection is selected, recordings are automatically triggered during the period of network breaking; if Alarm is selected, also with SD card selected under alarm out contact in the alarm interface, recording is automatically triggered when alarm occurs.

You can view the total size, used space and state of SD card and also format it. To remove SD Card when it is being used, please click “Reject”.

4.7.2 Replay

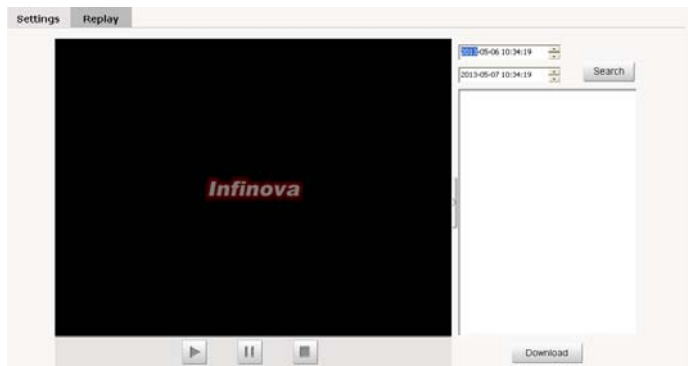


Figure 4-38 Replay

Video Search: set the start and end time, and then click the search button. All videos recorded during this period of time will display in the list.

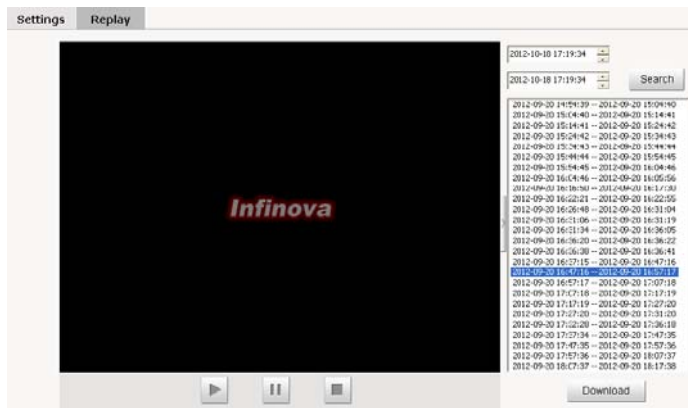


Figure 4-39 Searching Videos

Replay: to replay a video, double click a file in the list with the mouse or select a file and then press the “Play” button . During playing, click  or  to pause or stop playing.

Click the button  on the right of video window, the right window will disappear, show as below:



Figure 4-40

Click the button , the interface will return to the page as Figure 4-35.

Download: You can download the videos stored in the SD card to your PC. Select the file from the video list (also you can select multiple files simultaneously using the key “Ctrl” or “Shift”), and then click the button “Download” to enter the downloading interface.

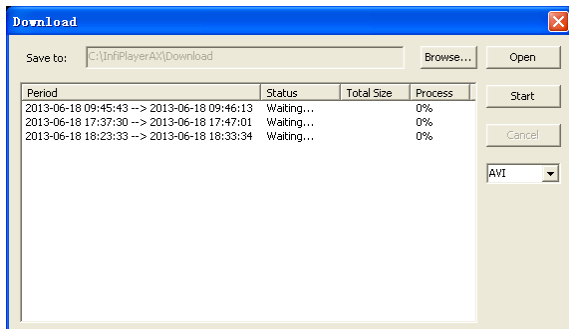


Figure 4-42 Downloading Videos

Save to: Set the path to save the downloaded files. If resetting required, click the button “Browse”.

AVI/H.264 drop-down list box: select the downloaded file attribute.

In the download list, file total size, status and process will display.

Click the button “Start”, and then the files in the list will be downloaded in order.

The process shows 100% after downloading is finished.

Click the button “Open” to enter download content.

4.8 Account Settings

The default super user is admin (password: admin). Super user can add, delete common user, and change the password of common users. Super user cannot change his own password. A maximum of 8 accounts are supported.

Detailed instruction about how to add and delete user are addressed below.

Click the Account option tab in the Settings interface, the following account information will display. The “Num” item shows the current user number. In

“Property” column,  stands for super user;  stands for common user. In

“Operation” column,  means to delete;  means to edit user information.

See figure below:

Add user 			
Num	User name	Property	Operation
1	admin		

Figure 4-43 Account Settings

1. Add Users

(1) Click “”, enter the interface of “Add a User”.

Add a User

User Name:

Password:

Password confirm:

Figure 4-44 Add a User

(2) Enter the desired User Name and Password (Note: User name and password shall include letter, number and underline only. No special character is allowed. The string length of user name is legal between 1 and 24 characters and that of password is between 5 and 20 characters.)

(3) Click “OK” button. If the setting is successful, the new user name will appear in the account list. Take new user “user1” as an example:

Add user 			
Num	User name	Property	Operation
1	admin		
2	user1		

Figure 4-11

2. Delete Users

In the “Account setting” interface, click  button of the “Operation” item to delete user. The following dialog box will display:

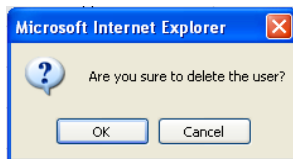


Figure 4-45

Click “OK” button, the selected user would be deleted and the account list would be automatically updated.

3. User Password Change

Click  button in the account list, the dialog box of Edit User Information will pop up:

A screenshot of a web form titled 'Edit User Information'. It contains four input fields: 'User name:' with the value 'user1', 'Old password:', 'New password:', and 'Confirm password:'. At the bottom are 'OK' and 'Cancel' buttons.

Figure 4-46

Input the old password, enter the desired new password for twice and then click “OK” button, the following picture will appear:



Figure 4-47

4.9 System Log

Click the “Log” option tab, the date, time and log information will appear on the right of the screen.

Date	Time	Log
2012 - 09 - 12	14 : 23 : 35	app: change IP to 192.168.160.233
2012 - 09 - 10	11 : 21 : 00	app: system start!!
2012 - 09 - 06	20 : 20 : 00	app: system start!!
2012 - 09 - 06	12 : 17 : 48	app: system start!!
1970 - 01 - 01	00 : 01 : 55	app: change Gateway to 192.168.160.254
1970 - 01 - 01	00 : 01 : 55	app: change netmask to 255.255.248.0
1970 - 01 - 01	00 : 01 : 55	app: change IP to 192.168.162.151
1970 - 01 - 01	00 : 00 : 19	app: system start!!
1970 - 01 - 01	00 : 00 : 19	app: image_server or encode_server isn't started !

  Page 1 of 1   Goto  Delete logs

Figure 4-48

It can display 30 logs on a page. The user can turn over the pages or skip to the desired page by clicking the below arrows. Click “Delete logs”, a prompt will come out. Then, click “Yes” to clear logs.

APPENDIX I MAGNETIC RING FILTER INSTRUCTION

To reduce electromagnetic interference that power supply generates, it is necessary to install a magnetic ring filter with the power cable of Infinova front-end IP device.

To install a magnetic ring filter with power supply:

Step 1: Open the magnetic ring filter and lead the power cable through.

Step 2: Wire the power cable on the magnetic ring filter 3 rounds or more (Make sure the filter can be well closed).

Step 3: Close the magnetic ring filter.

Notice: The magnetic ring filter should be installed no more than 50 mm away from the power output connector. As shown in Figure 3, the cable length from A to B should be 50mm at most.



Figure 1 Closed magnetic ring filter



Figure 2 Open magnetic ring filter



Figure 3 Power cable with magnetic ring filter

APPENDIX II QUESTIONS & SOLUTIONS

The following table describes the symptoms causes and solutions for the problems.

Symptoms	Possible Causes	Solutions
The network camera does not perform initiation after power-on	Wrong power connection	Reconnect power cable
	Power supply failure	Repair or replace power supply
	PCB fuse damage	Replace the fuse
	Immediate startup after power-off	Restart 10 seconds later after power-off
	If PoE power supply is used, too long transmission distance may make the power of the Power Supply Switcher insufficient.	Shorten the length of the power supply network cable, or replace Power Supply Switcher of larger power
	If PoE power supply is used, connection to other electric appliance make the ground level not in the correct level.	Disconnect other electrical appliance.
No video signal displayed	The plug-in for viewing image is installed incorrectly.	Refer to the Plug-in Installation to reinstall it.
	Network camera's IP address conflicts with other user's IP address	Set the unique IP address
Vague image	Manual focus is not precise	Manually adjust the camera focus carefully.

APPENDIX III CABLE DIAMETER CALCULATION AND LIGHTNING & SURGE PROTECTION

Relation between 24VAC Cable Diameter and Transmission Distance


In general, the maximum allowable voltage loss rate is 10% for AC-powered devices. The table below shows the relationship between transmission power and maximum transmission distance under a certain specified cable diameter, on condition that the 24VAC voltage loss rate is below 10%. According to the table, if a device rated at 50W is installed 17-meter away from the transformer, the minimum cable diameter shall be 0.8000mm. A lower diameter value tends to cause voltage loss and even system instability.

Diameter (mm) Distance (ft / m) Power (W)	0.8000	1.000	1.250	2.000
10	283 (86)	451 (137)	716 (218)	1811 (551)
20	141 (42)	225 (68)	358 (109)	905 (275)
30	94 (28)	150 (45)	238 (72)	603 (183)
40	70 (21)	112 (34)	179 (54)	452 (137)
50	56 (17)	90 (27)	143 (43)	362 (110)
60	47 (14)	75 (22)	119 (36)	301 (91)
70	40 (12)	64 (19)	102 (31)	258 (78)
80	35 (10)	56 (17)	89 (27)	226 (68)
90	31 (9)	50 (15)	79 (24)	201 (61)
100	28 (8)	45 (13)	71 (21)	181 (55)
110	25 (7)	41 (12)	65 (19)	164 (49)
120	23 (7)	37 (11)	59 (17)	150 (45)
130	21 (6)	34 (10)	55 (16)	139 (42)
140	20 (6)	32 (9)	51 (15)	129 (39)
150	18 (5)	30 (9)	47 (14)	120 (36)
160	17 (5)	28 (8)	44 (13)	113 (34)
170	16 (4)	26 (7)	42 (12)	106 (32)
180	15 (4)	25 (7)	39 (11)	100 (30)
190	14 (4)	23 (7)	37 (11)	95 (28)
200	14 (4)	22 (6)	35 (10)	90 (27)

Lightning & Surge Protection

The product adopts multi-level anti-lightning and anti-surge technology integrated with gas discharge tube, power resistor and TVS tube. The powerful lightning and surge protection barrier effectively avoids product damage caused by various pulse signals with power below 4kV, including instantaneous lightning, surge and static. However, for complicated outdoor environment, refer to instruction below for lightning and surge protection:

- The product features with dedicated earth wire, which must be firmly grounded. As for surveillance sites beyond the effective protection scope, it's necessary to erect independent lightening rods to protect the security devices. It's recommended to separate the lightning rod from the mounting pole, placing the rod on an independent pole, as shown in the figure below. If the product has to be installed on the same pole or pedestal for lightning rod, there should be strict insulation between the video cable BNC terminal, power cable, control cable and the standing pole of the lightning rod.
- For suburb and rural areas, it's recommended to adopt direct burial for the transmission cables. Overhead wiring is prohibited, because it's more likely to encounter lightning strike. Use shielded cables or thread the cables through metal tubes for burial, thus to ensure the electric connection to the metal tube. In case it's difficult to thread the cable through the tube all the way, it's acceptable to use tube-threaded cables only at both ends of the transmission line, yet the length in burial should be no less than 15 meters. The cable sheath and the tube should be connected to the lightning -proof grounding device.
- Additional high-power lightning-proof equipment and lightning rods should be installed for strong thunderstorm or high induced voltage areas (such as high-voltage substation).
- The lightning protection and grounding for outdoor devices and wires should be designed in line with the actual protection requirement, national standards and industrial standards.
- The system should perform equipotential grounding by streaming, shielding, clamping and earthing. The grounding device must meet anti-interference and electric safety requirements. There should be no short-circuiting or hybrid junction between the device and the strong grid. Make sure there's a reliable grounding system, with grounding resistance below 4Ω (below 10Ω for high soil resistivity regions). The cross-sectional area of the earthing conductor should be no less than 25mm^2 .

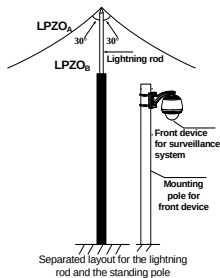

Infinova

**51 Stouts Lane,
Monmouth Junction, NJ 08852, U.S.A.**

Tel: 1-888-685-2002 (USA only)

1-732-355-9100

Fax: 1-732-355-9101

sales@infinova.com

V1.4 1409